


Shapes Desk

with Casters and Glides

1. Unscrew the glide out of the insert leg.

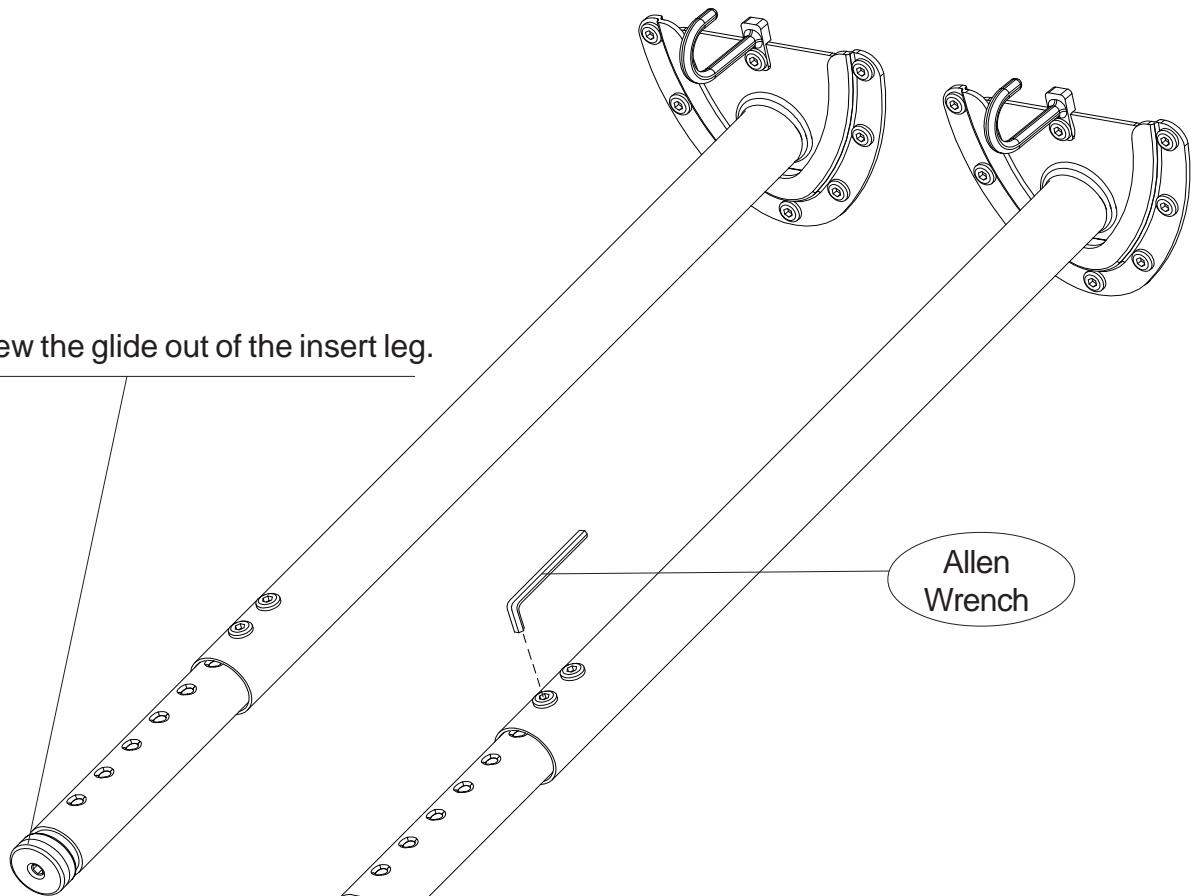

Allen
Wrench

2. Screw in the Spacer from your Caster Package into the bottom of the insert leg.

3. Screw a Caster into the bottom of the Spacer and tighten using the supplied Caster Wrench.

4. Use an Allen Wrench to reset the Caster Insert Legs to match the height of the Legs that have glides.

Assembly Instructions