




ASSEMBLY INSTRUCTIONS

MSSC-200 MOBILE STORAGE ASSEMBLY INSTRUCTIONS

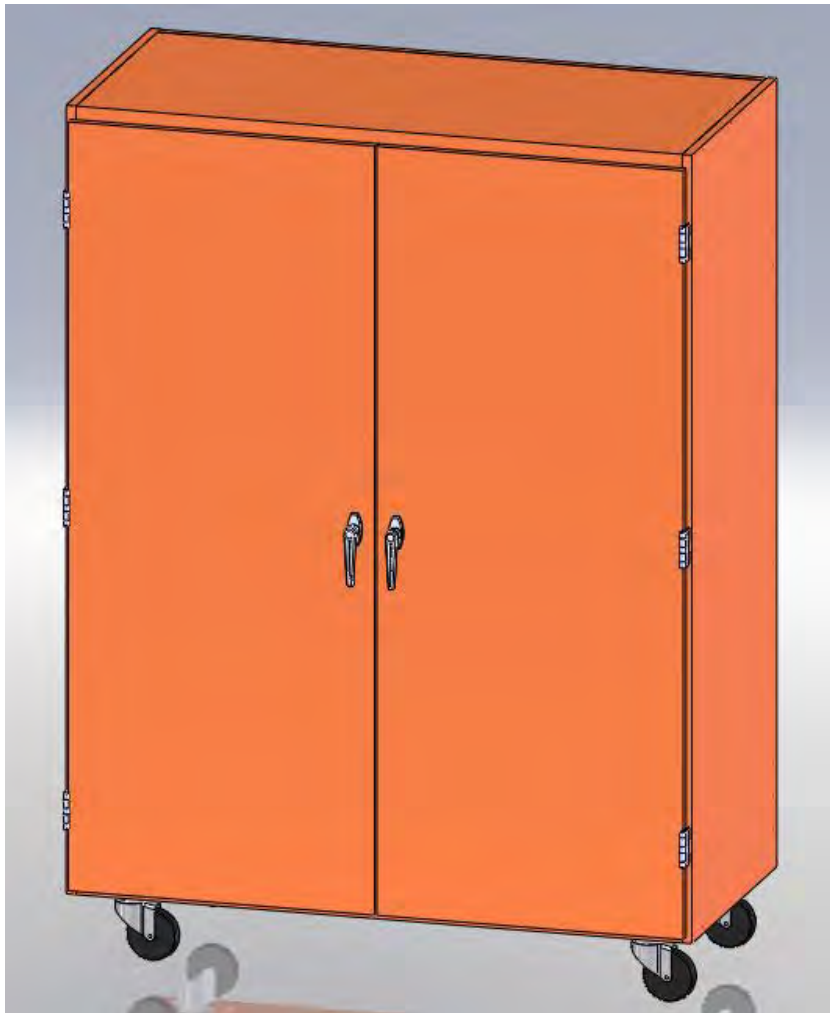

***Model views may not represent exact model purchased**

TABLE OF CONTENTS

	PAGE
REVISIONS TABLE.....	3
ASSEMBLY COMPONENTS.....	3
CASTER ASSEMBLY.....	4

ASSEMBLY COMPONENTS

ITEMS INCLUDED	PART #		PART #
ASSEMBLY INSTRUCTIONS		1-HARDWARE BOX	
4-CASTERS, 4" SWIVEL PLATE	100081	1-SHELF,ADJ,MPL,EB1,1.00	200355-4618
		8-SHELF CLIPS,PLASTIC,5mm PIN	100027

REV	DESCRIPTION	DATE	INITIAL
---	Original Created	5-22-09	NAM

**Assembly Instructions for
MSSC-200 MOBILE STORAGE**

Items not included but needed for assembly:

1. ½" Wrench

2. Adjustable pliers

Instructions:

1. Attach the (4) 100081 4" Swivel Top Plate, W/Brake Casters into place using the (16) 100488 Screw, ¼" - 20X1 ¼" slotted flat, (16) 218589 Washer, ¼" Flat, Zinc Plated & the (16) 100483 Nut, ¼" - 20 Hex Zinc into the bottom of the base as shown.

Figure 1

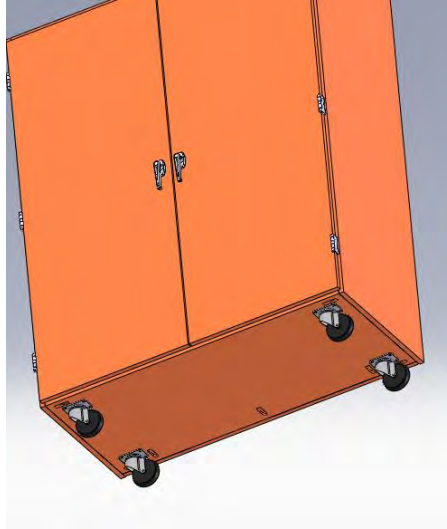


Figure 1A Detail

